



### **Placement instructions Active Noise.**

The speaker is a directional speaker and takes sound from one centered direction. Point the microphone towards the source of the noise. There should be some distance between the microphone and the noise (at least 5 metres).

Place the speakers towards the yourself, or the place that needs the noise cancelling.

Most likely, there needs to be some adjustment of the directions of microphone and speakers in order to optimize the workings.

